

# Table of Contents

Use cases ..... 3

*Stingray Service Gateway Server* ..... 3



# Use cases

## Stingray Service Gateway Server

Before installing VEOS, the server hardware must be prepared according to [the instructions in the Stingray SG section](#).

To configure the operating mode of the DPI server after a successful installation and VEOS boot, the OS must be [preconfigured](#).

[test](#)